DataTraveler[®] Hardware Installation Guide

System Requirements

- Pentium III Processor
- 16 MB free disk space
- USB 1.1 or USB 2.0 port
- Operating Systems
 - Windows 2000[®] SP3 and SP4
 - o Windows XP® (Home and Professional) SP1 and SP2
 - Windows VistaTM (32-bit only)
- Two available drive letters between physical drives and network shares.

Installation and Setup

No drivers are required. Insert the DataTraveler® into an available USB port.

During the initial setup, you will be prompted to create a password that must consist of 6 to 16 characters. It must also contain three of the following character types: lowercase letters, uppercase letters, numeric or special characters (i.e. ABC\$123 or Bob411). After the initial setup is complete, login to the drive upon insertion. Enter your password to access the drive.

Storing data

The DataTraveler will display in Computer (My Computer in Windows XP/2000) with two drive letters. One drive letter will be assigned to the Launcher partition, which is the drive's read-only partition. Another drive letter will be assigned to the Kingston Drive (Removable Disk on Windows 2000), which is the read/write partition where you will store your files and folders. Transferring your data onto the drive is a simple drag-and-drop operation.

Lock-down

When a number of incorrect password attempts exceeds a pre-configured value (factory default is 10), the drive will be disabled and must be reformatted to regain operation. Please Note: All of the data stored on the drive will be lost!

Safely remove the drive

Click on the System Tray icon and select **Shut down ...** Once you receive the confirmation, you can safely remove the drive from the USB port.

FAQ(s)

- Q1 I inserted the drive into a Windows Vista or XP system and it does not show up in Computer (My Computer in XP) or I receive a "DT... requires two free drive letters" error message.
- A1 This is a Windows Vista and XP issue caused by a drive letter conflict. In configurations where the network drive letters follow physical drive letters, Windows Vista and XP may assign newly inserted flash drives a drive letter which is already taken by a network share. The quickest way for administrative users to solve this problem is to manually change the drive letter for the flash drive in Disk Management located in Control Panel -> Administrative Tools -> Computer Management. For Kingston drives, change the conflicting drive letter for the Launcher partition. If the launcher does not auto-run, reinsert the drive or manually run the Launcher/Executable from the Launcher partition.

For additional information, please refer to the DT... User's Manual located on the Launcher partition.

v 1.1