



Wi-Drive CD Updater

Wi-Drive CD Updater for Windows

System Requirements:

- Administrator (or user with administrative privileges)
- Windows XP (SP3)
- Windows Vista (SP2)
- Windows 7

(NOTE: Before running this CD Updater, it is strongly recommended that you make a back-up copy of the data content you have stored on the Wi-Drive device.)

Wi-Drive CD Updater (Windows)

1. Log-in to the system as Administrator (or a user with administrative privileges.)
2. Connect the Wi-Drive to a USB port on your PC using the USB cable included with your device.
3. Double-click the Wi-Drive 'Updater' application (*Figure 1.1*.)
4. Click 'OK' to confirm the CD UpdateTool shown in *Figure 1.2*. ****NOTE:** Do **NOT** disconnect Wi-Drive during this step.



Updater

Figure 1.1 - Updater

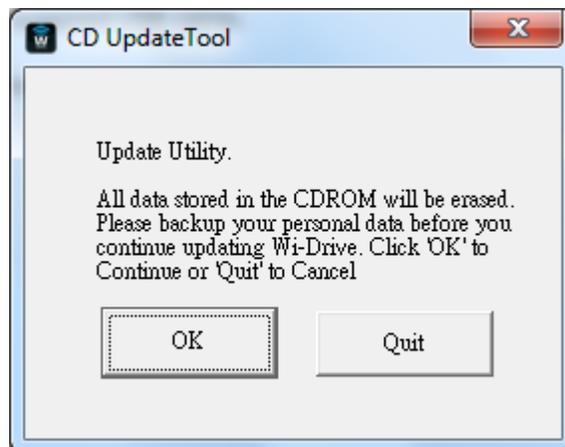


Figure 1.2 – 'CD UpdateTool' window

5. Click the 'OK' button once the update has completed. See *Figure 1.3*.

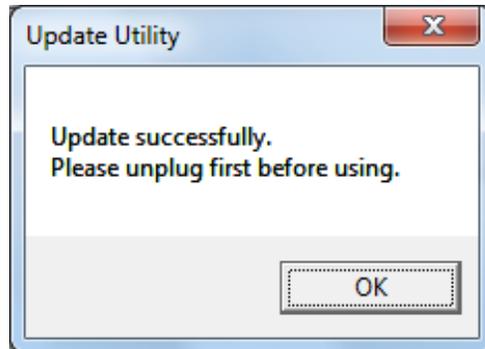


Figure 1.3 – 'Update Utility' window

6. Disconnect Wi-Drive from your PC and turn on device to begin using.

– 'CD Update' Section Complete –

To verify that the update has been applied successfully, power on the Wi-Drive and verify the CD version listed in the Wi-Drive App located under the "Settings" icon (see *Figure 1.4*.) You should see "CD: v1.00.15."



Figure 1.4 →